

## Wooden insect screen's installation and adjustment instructions Rev. 1.0

 
### Installation with hinges

#### **Insect screens with hinges**

Forks, ferrules and magnetic locks are already installed in the windows and insect screens.


# Accessories which are delivered together with the main products:

- 1. Locking pins.
- 2. Knobs and installation screws.
- 3. Counterparts for the magnets.

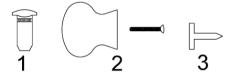

#### **Installation stages picture 1:**

- 1. Set the insect screen and fasten it with the locking pin. Regulate if necessary.
- 2. Fasten the magnetic counterpart to the magnet locating in the insect screen. By this way counterpart will settle in the right position.
- 3. Close the insect screen. If necessary, You can use the hammer and knock slightly to the counterpart for ensuring installation.
- 4. Finally install the knob for the predrilled hole.

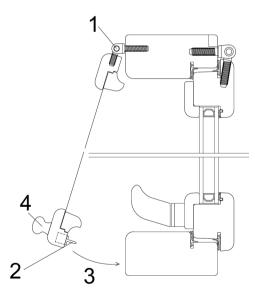


**Picture 1.** Insect screen's Installation inside the window.

#### **Adjustment insructions**

 You can adjust the position of the insect screen by turning net's forks or ferrules to clockwise or counterclockwise (picture 2).

- First, take off the locking pins and take the insect screen off.
- If the insect screen is too far from the frame, turn the fork (1) to clockwise, or counterclockwise, if it is too close.
- In-two part insect screens. If the insect screen sashes are too close, turn the ferrules (2) clockwise, or counterclockwise, if they are too far.

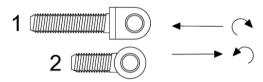


**Picture 2.** Fork-(1) and ferrule-part (2) adjusting.


# Installation with screws Just for the MS and MSE - windows

#### Installation stages:

- 1. Set the insect screen to the window hole and draw the screw places on the frames (picture 3).
- 2. Fasten screws tentatively on the points marked.
- 3. Install the insect screen, turn the net's lower part according the picture 4 and fasten the screws conclusive.

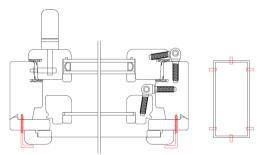

Picture 3. Installation with the screws.

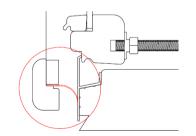

**Picture 4.** Turning the net's lower part.

Notice. We recommend to get off the insect screens from the windows outside the insect-season (e.g. the birds or the weather conditions can cause damages for the nets).